


Instructions for upgrading ADL software and firmware:

Note: Upgrading firmware in an ADL radio does not affect the existing user configuration or channel tables.

1. Download the ADLCONF software upgrade zip file (ADLCONF_4.02_setup.zip) and the ADL FW zip file (ADL_FW_v4.01.0120.zip) and extract the contents to a directory on your PC
2. Because some PCs and/or networks prevent executable files from being downloaded, the software installer's "exe" file extension is changed to "xxx." To rename the file extension:
 - Right-click the downloaded file called **ADLCONF_4.02_setup.xxx**
 - Select the **Rename** option
 - Change the file extension from "xxx" to "exe"
 - Press **Enter** on your keyboard
3. Press **Enter** again (or double-click **ADLCONF_4.02_setup.exe**) to install the new version of ADLCONF
4. Attach the ADL radio's programming cable to the radio, to power, and to your PC
5. Run ADLCONF 4.02 and click **File>Upgrade Modem Firmware**
6. Navigate to the download directory, click the *.bin firmware file and click **Open**
7. Click **OK** on the **Connect to ADL Radio** dialog box
8. If you see the following window, power-cycle the radio

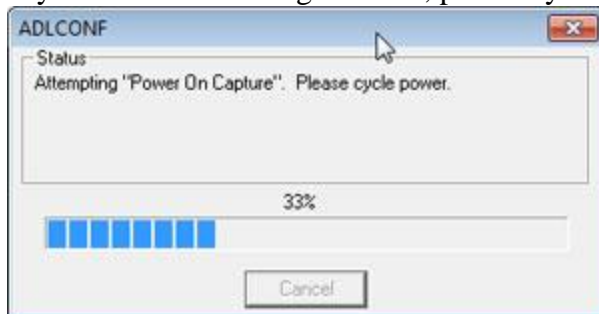

9. Do not detach the radio from its programming cable until the upgrade is complete (approximately 1 minute)
10. To configure the attached ADL radio with the new features supported by ADLCONF 4.02, power cycle the radio and click ADLCONF's **Connect** button

For information on the changes made to ADL software and firmware, click on [Advanced Data Link Release Notes, July 2013.pdf](#)